

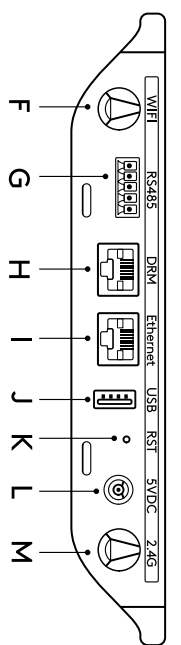


POWER CENTER+ Installation Quick Guide PC-PRO-WIFI

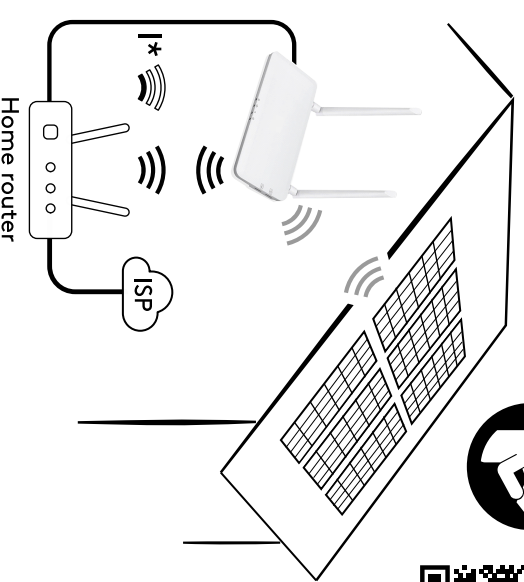

Ports

- F – Wi-Fi antenna input (2.4G)
- G – RS-485
- H – DRM (Australia only)
- I* – Ethernet
- J – USB
- K – Reset button
- L – Power adapter (not shown) input 5V/2A
- M – Wi-Fi antenna input (2.4G)

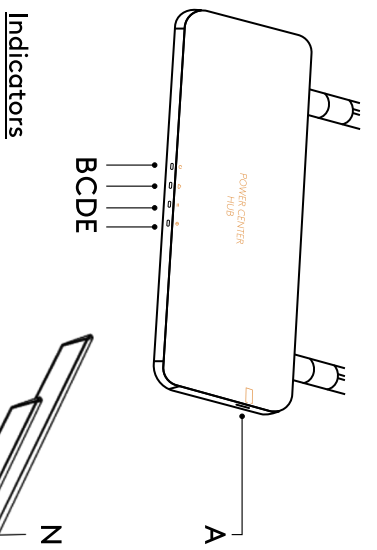



BCDE

Indicators


- B – Power
- C – Server communication
- D – Microinverter communication
- E – System alarm

Other


- A – SD card slot
- N – Antenna, screw type
- O – Wall bracket
- P – Serial number label

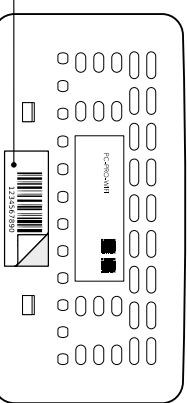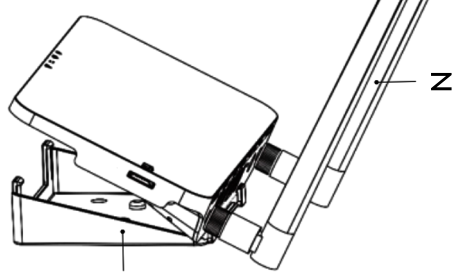

1

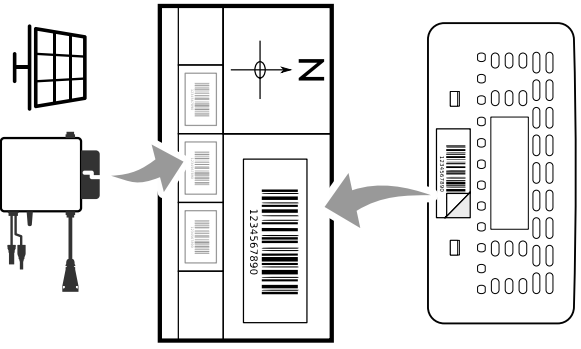


2

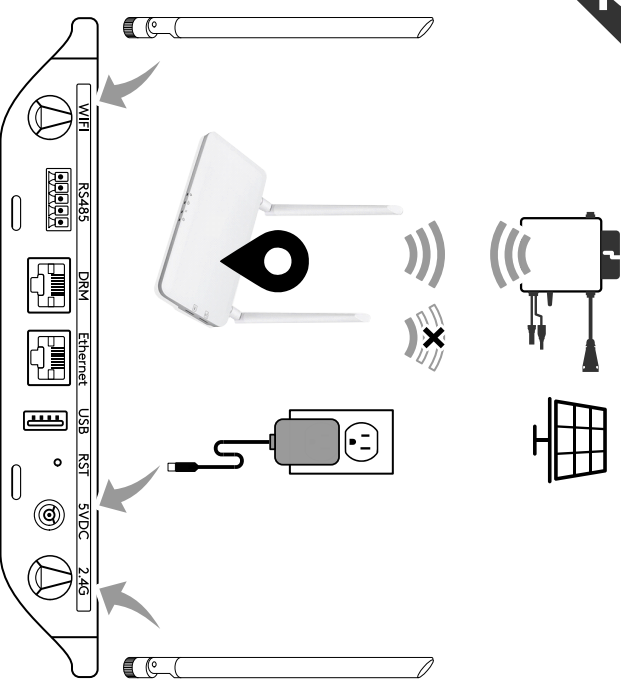

3




OR

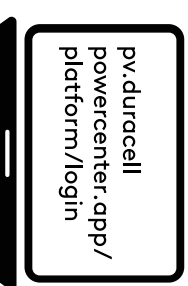


4



O&M

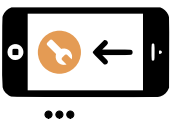

Network Config

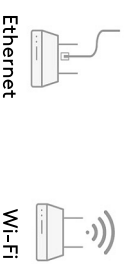

Ethernet



Wi-Fi

Please select a WiFi network name and enter the password.

Wi-Fi Password


SEND TO DTU



1 Wi-Fi Setup



1.1 DTU Connection

- 1 Open mobile device and navigate to WiFi settings
- 2 Connect phone to the WiFi broadcast named: DTUP- (device serial number)
- 3 Once connected to the DTU, exit settings

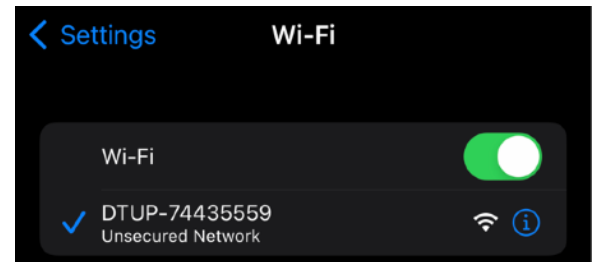


1.2 App Navigation

- 4 Open the Duracell Micro Inverter app

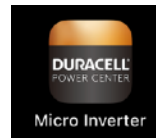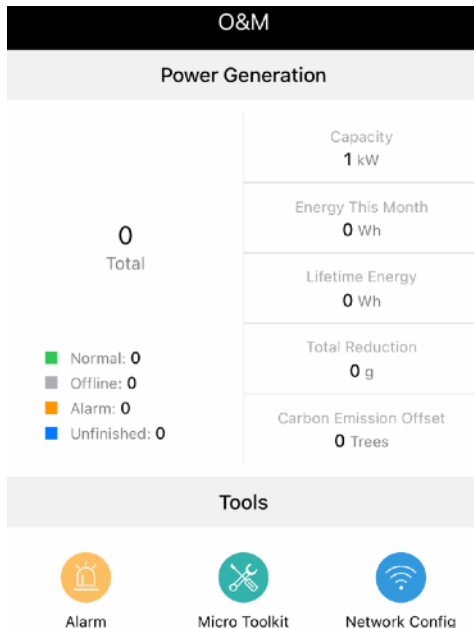



- 5 Press the [Wrench] icon at the bottom of the screen

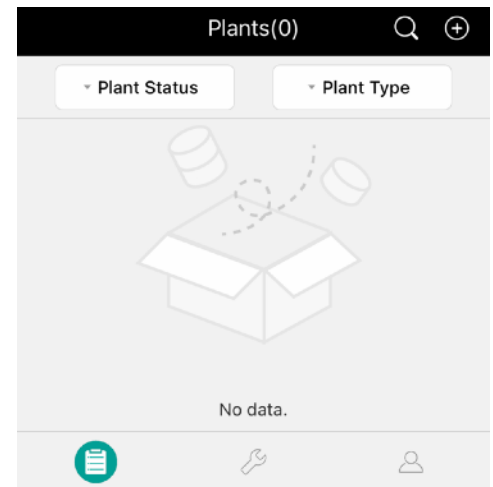

- 6 Press the [Network Config] icon at the bottom of the screen

1.3 Network Config

- 7 At the top choose whether Ethernet or WiFi connection. App defaults to Wifi
- 8 Enter the WiFi account name, or press the [Down Arrow] icon to the right of the login name
- 9 Type out the networks [Password] into the field. Press the [Eyeball] icon to the right of the window to view the password

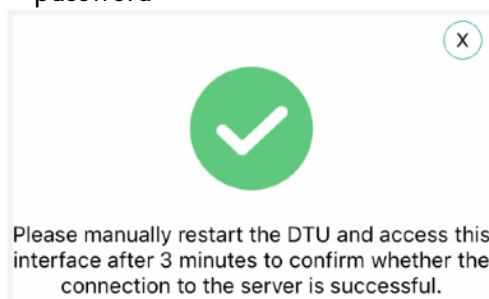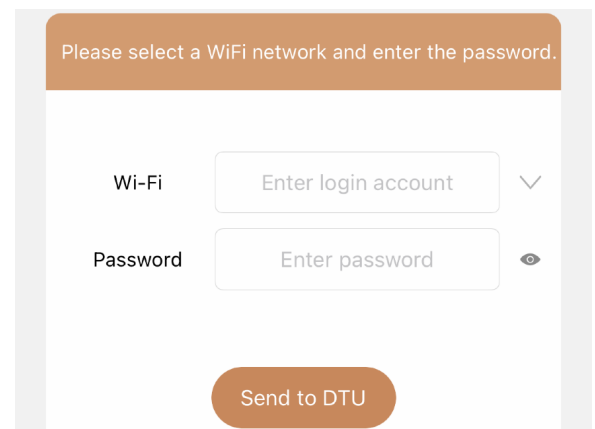

- 10 Press the [Send to DTU] button when finished

- 11 The app will process the data then ask for the DTU to be restarted. It is advisable to unplug the DTU transformer from the wall and then set a 2 minute timer

- 12 Reconnect to DTU in Settings, reopen app, and confirm DTU is connected to WiFi