
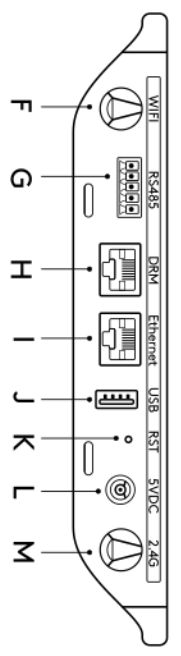
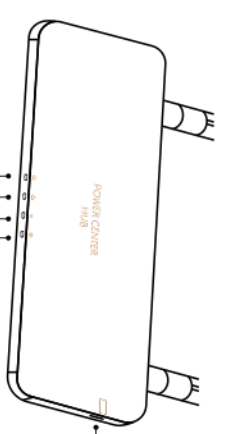


POWER CENTER+ Installation Quick Guide PC-PRO-WIFI

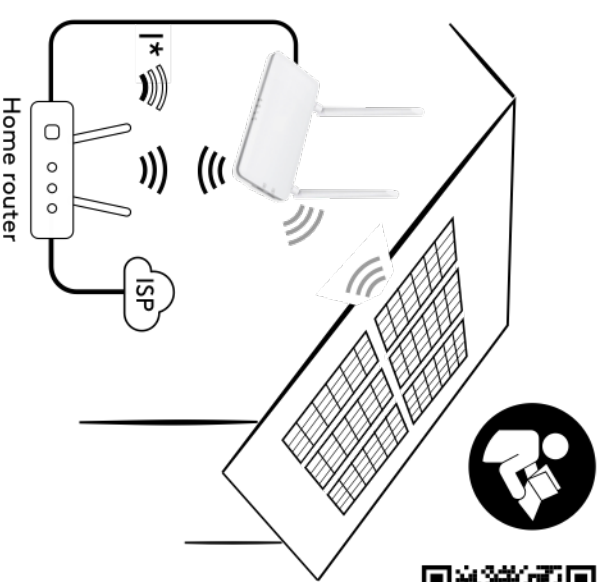

Ports



- F - Wi-Fi antenna input (2.4G)
- G - RS-485
- H - DRM (Australia only)
- I* - Ethernet
- J - USB
- K - Reset button
- L - Power adapter (not shown) input 5V/2A
- M - Wi-Fi antenna input (2.4G)

Indicators


- B - Power
- C - Server communication
- D - Microinverter communication
- E - System alarm

Other


- A - SD card slot
- N - Antenna, screw type
- O - Wall bracket
- P - Serial number label

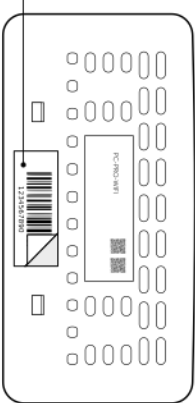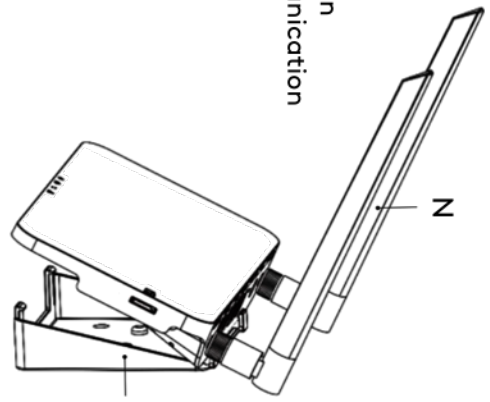

1

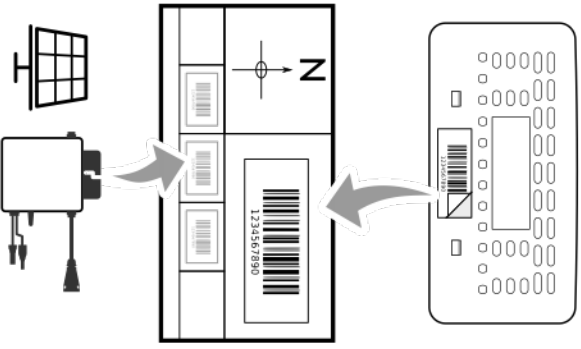

2

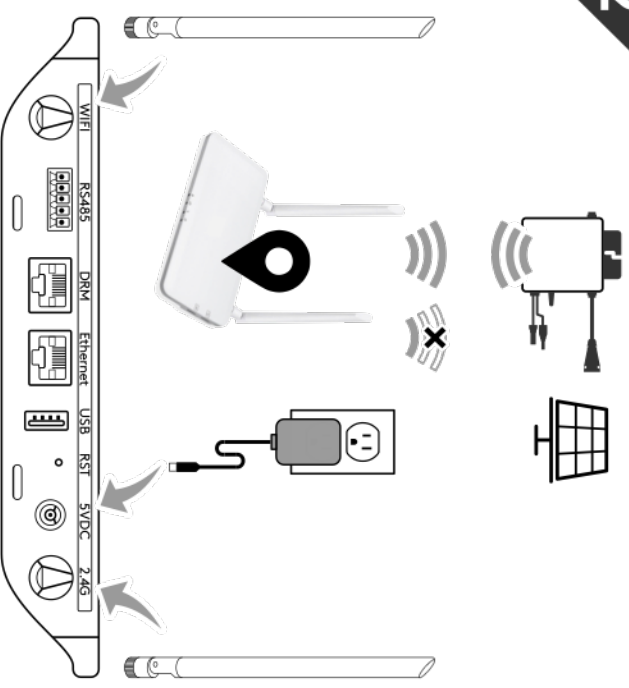


3



OR



4

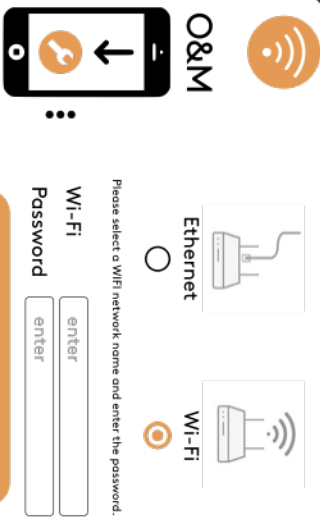


* ethernet recommended for reliable connectivity, and/or when Wi-Fi signal to the home router is inadequate.

1 Wi-Fi Setup


1.1 DTU Connection

- 1 Open mobile device and navigate to WiFi settings
- 2 Connect phone to the WiFi broadcast named: DTUP- (device serial number)
- 3 Once connected to the DTU, exit settings

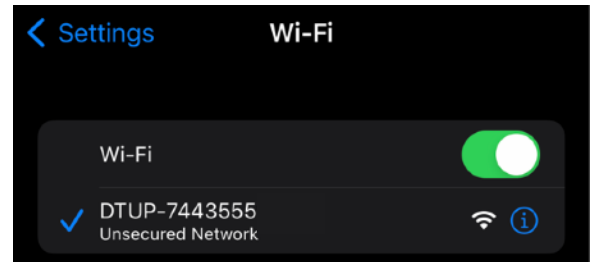


1.2 App Navigation

- 4 Open the Duracell PV Manager app

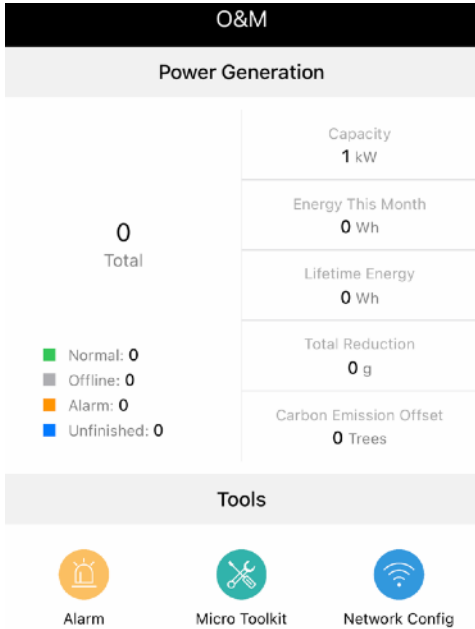



5 Press the [Wrench] icon at the bottom of the screen

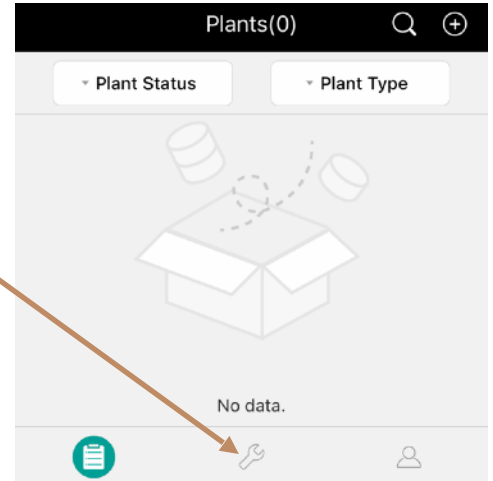

6 Press the [Network Config] icon at the bottom of the screen

1.3 Network Config

- 7 At the top choose whether Ethernet or WiFi connection. App defaults to Wifi
- 8 Enter the WiFi account name, or press the [Down Arrow] icon to the right of the login name
- 9 Type out the networks [Password] into the field. Press the [Eyeball] icon to the right of the window to view the password

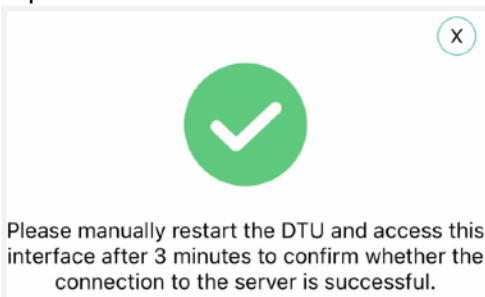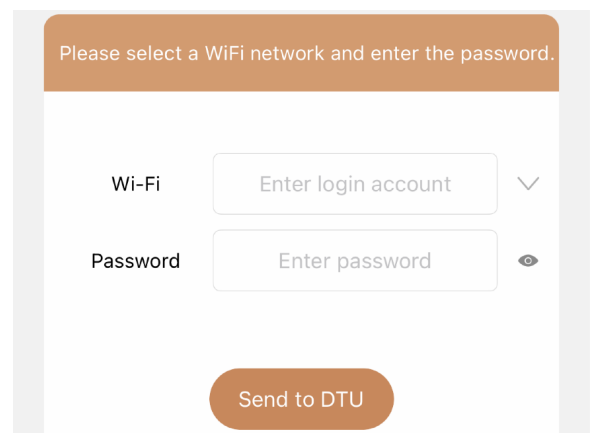

10 Press the [Send to DTU] button when finished

11 The app will process the data then ask for the DTU to be restarted. It is advisable to unplug the DTU transformer from the wall, set a 3 minute timer, and plug the transformer back in

- 12 Reconnect to DTU in Settings, reopen app, and confirm DTU is connected to WiFi